

【Quick Start Guide】

DuoTurbo



【How To Use GlocalMe Cloud SIM Service?】

 
01/ Download GlocalMe App

- Download and install GlocalMe app on your mobile phone




02/ Register a GlocalMe Account (in App)

- Press **【Log in】** → **【Continue】**
- Follow the step to register an account (You can register by email or mobile number)

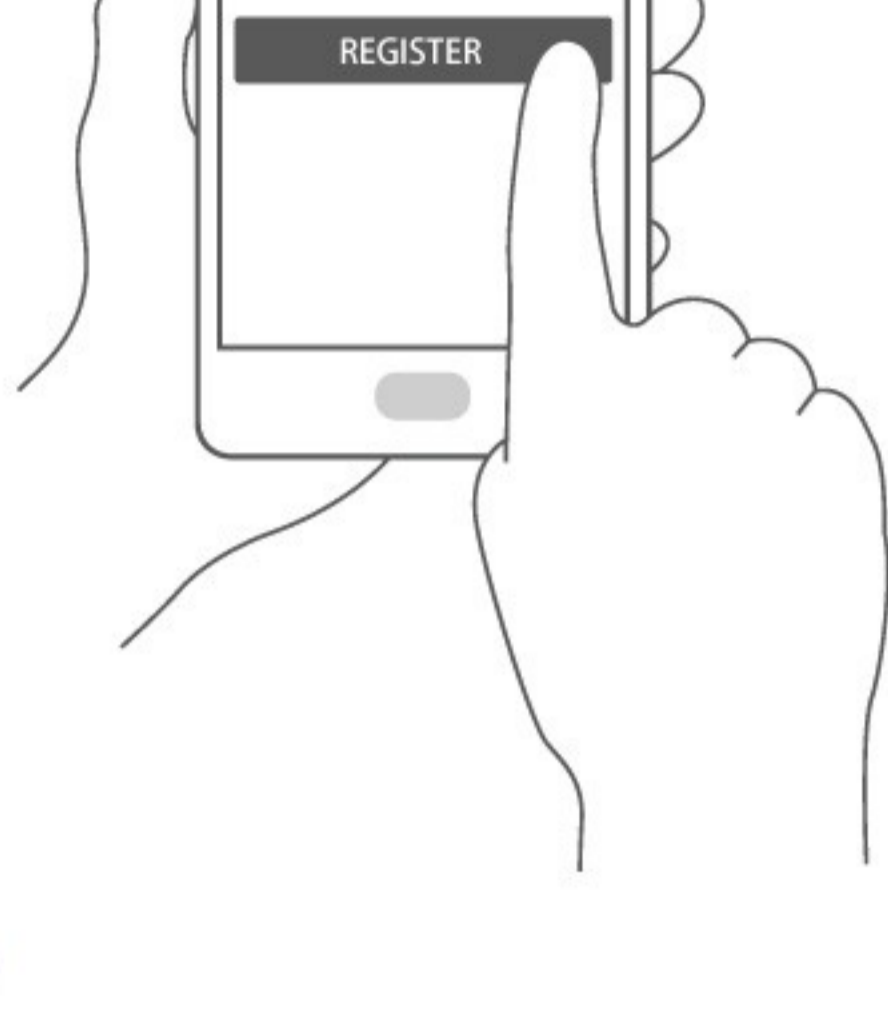

03/ Turn on DuoTurbo

 - Press and hold the power button for 3 seconds
- Press **【QR code】** on home page and find the device QR code on the screen

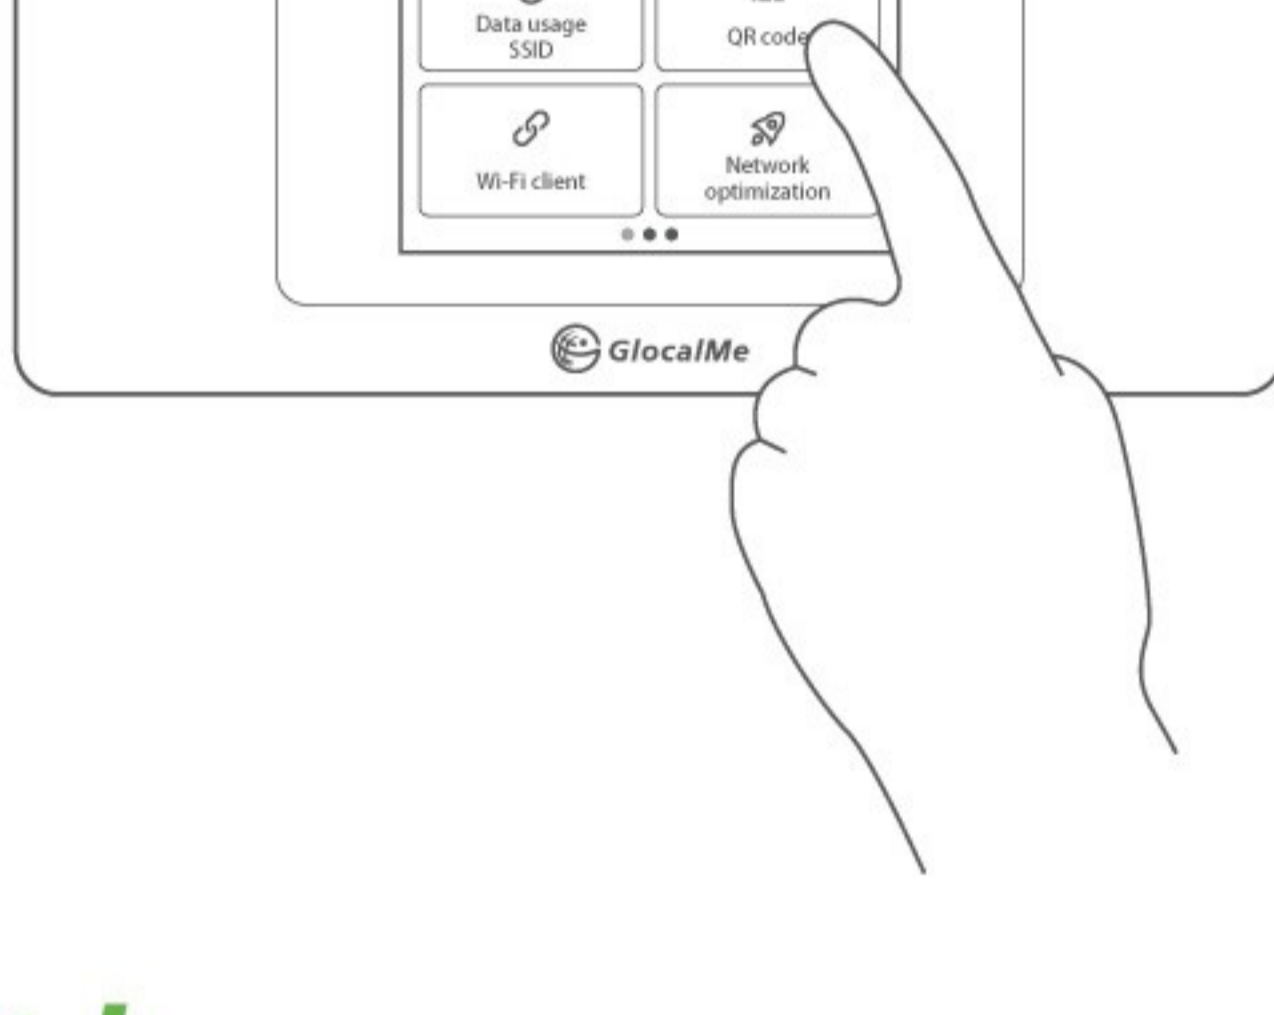


04/ Activate DuoTurbo

- GlocalMe App → **【My Device】** → **【Activate Device】**
- Scan the device QR code(Step 3) on DuoTurbo
- Re-start your DuoTurbo after activation success



05/ Connect the Wi-Fi

 - Press **【Data usage SSID】** on DuoTurbo and find the Wi-Fi name and password
- Connect your mobile device in Wi-Fi setting

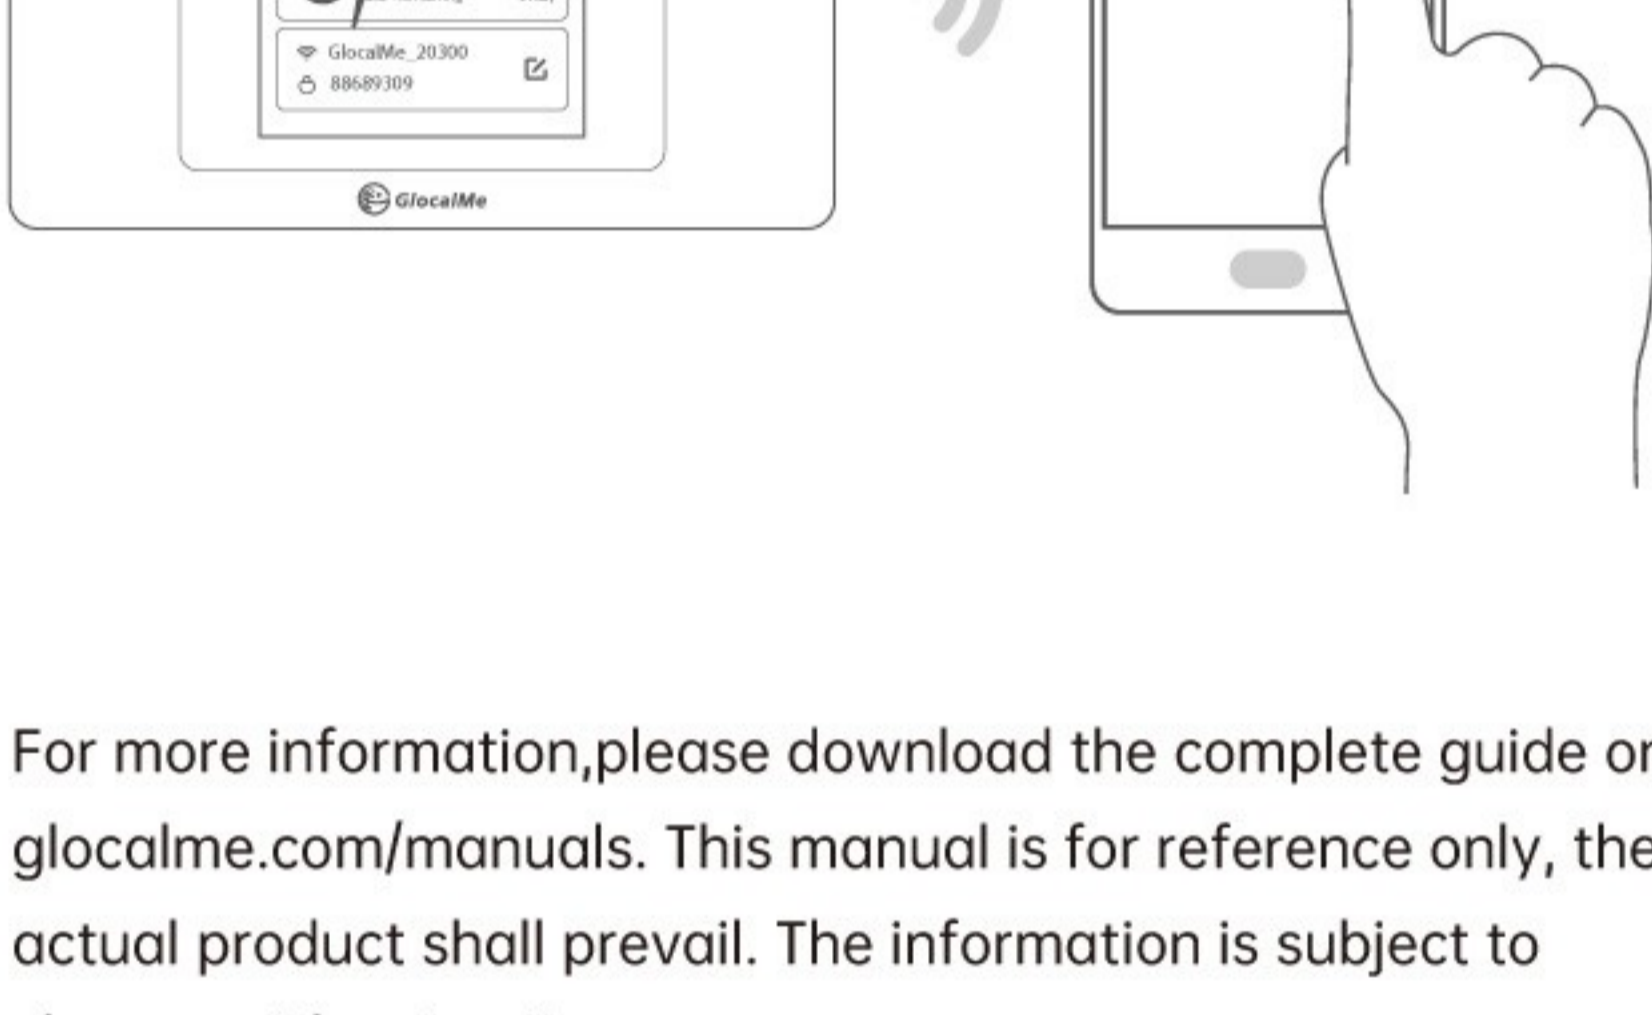

For more information, please download the complete guide on glocalme.com/manuals. This manual is for reference only, the actual product shall prevail. The information is subject to change without notice.

【How To Use A Physical SIM Card?】

01/ Insert A SIM Card

- Please turn off your device when inserting/removing SIM card
- Open the SIM card tray with a pin and insert the SIM card as shown in the picture below (DuoTurbo device only supports Nano-SIM cards.)

 


- Press **【SIM card manager】** Turn on **【SIM Card Network】**



02/ Unlock the SIM Card (if PIN protected)

- If the SIM card is in PIN protected, please input the PIN on screen to unlock the SIM card

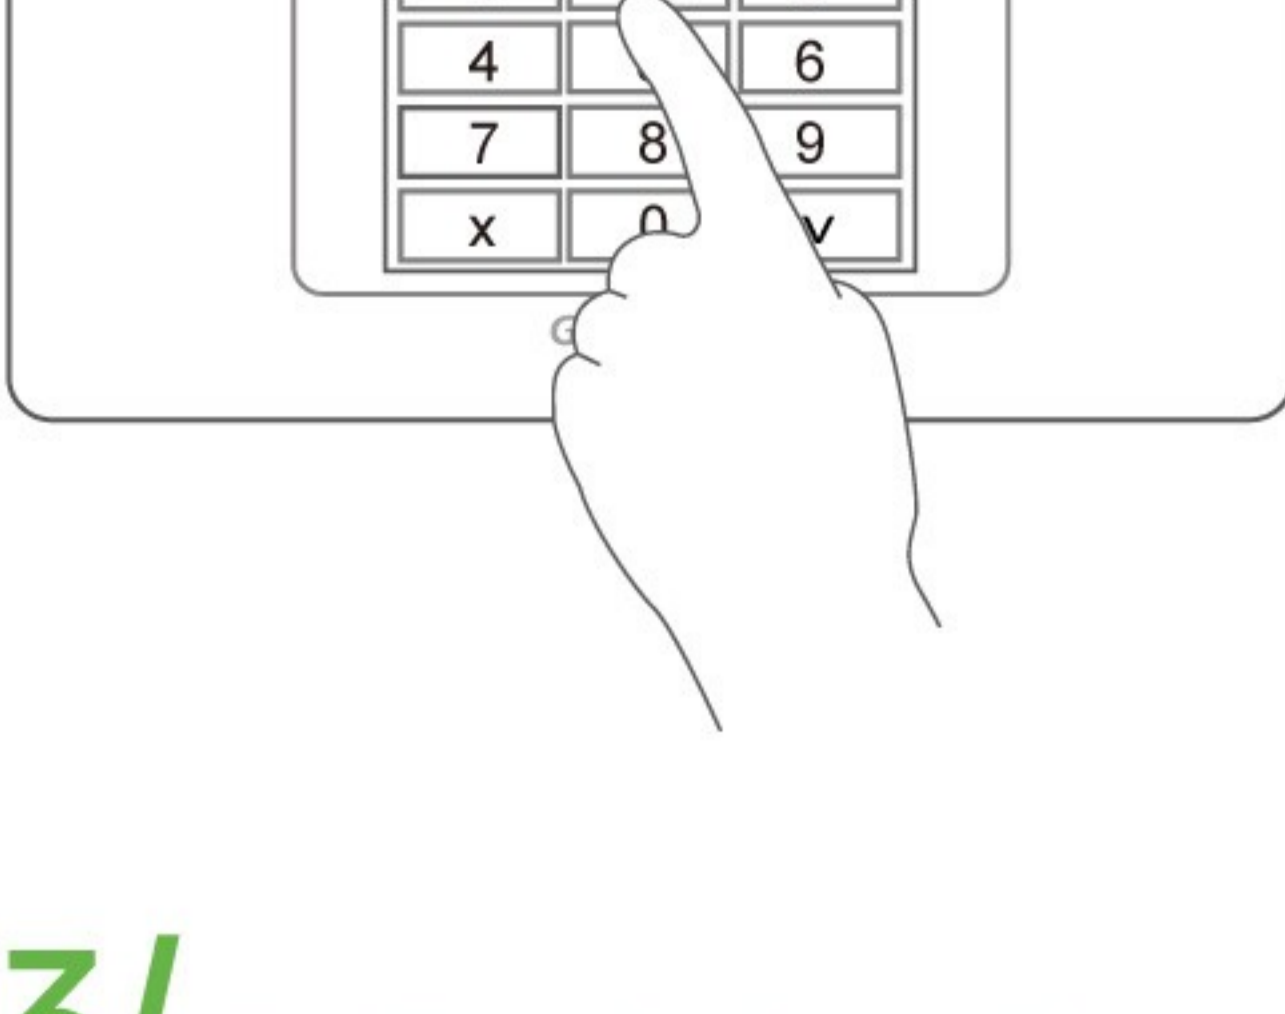

03/ Set The APN Manually

- If you still cannot connect to the network after the above steps, you must add the APN manually
- **【SIM card manager】** → **【APN】** Enter the APN of your SIM card provider according to the instruction and save the setting

